

<b>Brand</b>	<b>Model</b>
Asus	P750
Casio	A5512CA
Casio	E03CA
Casio	G'zOne TYPE-R
Casio	W21CA/CA II
Casio	W31CA
Casio	W41CA
Casio	W42CA
Casio	W43CA
Casio	W51CA
Casio	W52CA
Casio	W53CA
Casio	W61CA
Casio	W62CA
DreamPhone	G500i
Hitachi	PENCK
Hitachi	W22H
Hitachi	W32H
Hitachi	W41H
Hitachi	W42H
Hitachi	W43H/H II
Hitachi	W51H
Hitachi	W52H
Hitachi	W53H
Hitachi	W61H
Hitachi	W62H
HTC	P3600 Trinity
HTC	TyTN
Kyocera	A5515K
Kyocera	A5521K
Kyocera	A5526K
Kyocera	A5528K
Kyocera	MEDIA SKIN
Kyocera	W21K
Kyocera	W31K/K II
Kyocera	W32K
Kyocera	W41K
Kyocera	W42K
Kyocera	W43K
Kyocera	W44K II Camera
Kyocera	W44K/K II
Kyocera	W51K
Kyocera	W53K/W64K
Kyocera	W61K
Kyocera	W62K
Kyocera	W63K
LG	KC910 (Vodafone)
LG	KE970
LG	KS10 JOY
LG	KT610
LG	KU990
Motorola	MPX100
Motorola	RAZR V3xxi iZar
Motorola	RAZR V6
Motorola	RAZR V6vb

NEC	600i
Nokia	3100
Nokia	3108
Nokia	3110
Nokia	3120
Nokia	3230
Nokia	3250
Nokia	3555
Nokia	3600
Nokia	3620
Nokia	3660
Nokia	5200
Nokia	5300
Nokia	5320
Nokia	5500
Nokia	5700
Nokia	6085
Nokia	6086
Nokia	6125
Nokia	6126
Nokia	6131
Nokia	6133
Nokia	6136
Nokia	6151
Nokia	6233
Nokia	6234
Nokia	6260
Nokia	6263
Nokia	6267
Nokia	6290
Nokia	6300
Nokia	6301
Nokia	6500
Nokia	6555
Nokia	6600
Nokia	6620
Nokia	6630
Nokia	6638
Nokia	6650
Nokia	6670
Nokia	6680
Nokia	6681
Nokia	6682
Nokia	7210
Nokia	7310
Nokia	7373
Nokia	7390
Nokia	7500
Nokia	7610
Nokia	7710
Nokia	7900
Nokia	1680c
Nokia	3100 US
Nokia	3109c
Nokia	3110c
Nokia	3500c

Nokia	5220 XpressMusic
Nokia	5310 XpressMusic
Nokia	5610 XpressMusic
Nokia	5800 XpressMusic
Nokia	6110 Navigator
Nokia	6120c
Nokia	6121c
Nokia	6131 NFC
Nokia	6210 Navigator
Nokia	6220c
Nokia	6300i
Nokia	6500s
Nokia	6600f
Nokia	6680i
Nokia	8600 Luna
Nokia	8800 Sirocco Edition
Nokia	E50
Nokia	E51
Nokia	E60
Nokia	E61
Nokia	E61i
Nokia	E62
Nokia	E63-1
Nokia	E65
Nokia	E66
Nokia	E70
Nokia	E71
Nokia	E90 Communicator
Nokia	N5220XpressMusic
Nokia	N70
Nokia	N70 Opera
Nokia	N71
Nokia	N73
Nokia	N75
Nokia	N76
Nokia	N77
Nokia	N78
Nokia	N80
Nokia	N800
Nokia	N81
Nokia	N810
Nokia	N82
Nokia	N85-1
Nokia	N90
Nokia	N91
Nokia	N92
Nokia	N93
Nokia	N93i
Nokia	N95
Nokia	N95 (North America)
Nokia	N95 8GB
Nokia	N96
Nokia	N-Gage
Nokia	N-Gage QD
NTT DoCoMo	903iTV
NTT DoCoMo	D505i

NTT DoCoMo	F505i
NTT DoCoMo	F704i
NTT DoCoMo	F900i
NTT DoCoMo	N505i
NTT DoCoMo	N900i
NTT DoCoMo	P505i
NTT DoCoMo	P900i
NTT DoCoMo	SH505i
NTT DoCoMo	SO505i
Palm	Treo 500v
Palm	Treo 750v
Palm	Treo 750w
Panasonic	W51P
Panasonic	W52P
Panasonic	W61P
Pantech	W61PT
Sagem	my700Xi
Samsung	GT-I8510
Samsung	S501i
Samsung	SGH-i400
Samsung	SGH-i450
Samsung	SGH-i550
Samsung	SGH-i560
Samsung	SGH-Z400
Samsung	SGH-ZV10
Sanyo	A5507SA
Sanyo	A5514SA
Sanyo	A5516T
Sanyo	A5518SA
Sanyo	A5520SA/SA II
Sanyo	A5522SA
Sanyo	A5525SA
Sanyo	A5527SA
Sanyo	E02SA
Sanyo	INFOBAR 2
Sanyo	Sweets
Sanyo	Sweets cute
Sanyo	Sweets pure
Sanyo	talby
Sanyo	W21SA
Sanyo	W22SA
Sanyo	W31SA/SA II
Sanyo	W32SA
Sanyo	W33SA/SA II
Sanyo	W41SA
Sanyo	W42SA
Sanyo	W43SA
Sanyo	W51SA
Sanyo	W52SA
Sanyo	W53SA
Sanyo	W54SA
Sanyo	W61SA
Sanyo	W62SA
Sanyo	W63SA
Sanyo	W64SA
Sharp	W41SH

Sharp	W51SH
Sharp	W52SH
Sharp	W61SH
Sharp	W62SH
SonyEricsson	C702
SonyEricsson	C902
SonyEricsson	G502
SonyEricsson	K530
SonyEricsson	K530i
SonyEricsson	K550im
SonyEricsson	K600
SonyEricsson	K600i
SonyEricsson	K608
SonyEricsson	K608i
SonyEricsson	K610im
SonyEricsson	K660i
SonyEricsson	K770i
SonyEricsson	K790
SonyEricsson	K790a
SonyEricsson	K790c
SonyEricsson	K790i
SonyEricsson	K850i
SonyEricsson	P800
SonyEricsson	P802
SonyEricsson	P900
SonyEricsson	P908
SonyEricsson	P910
SonyEricsson	P910a
SonyEricsson	P910c
SonyEricsson	P910i
SonyEricsson	P990
SonyEricsson	P990c
SonyEricsson	P990i
SonyEricsson	S500i
SonyEricsson	S600
SonyEricsson	T650i
SonyEricsson	V600i
SonyEricsson	V640i
SonyEricsson	V800
SonyEricsson	V802
SonyEricsson	W200i
SonyEricsson	W200iv
SonyEricsson	W21S
SonyEricsson	W300
SonyEricsson	W300c
SonyEricsson	W300i
SonyEricsson	W31S
SonyEricsson	W32S
SonyEricsson	W350i
SonyEricsson	W380a
SonyEricsson	W380i
SonyEricsson	W41S
SonyEricsson	W42S
SonyEricsson	W43S
SonyEricsson	W44S
SonyEricsson	W51S

SonyEricsson	W52S
SonyEricsson	W53S
SonyEricsson	W54S
SonyEricsson	W550c
SonyEricsson	W550i
SonyEricsson	W580
SonyEricsson	W580i
SonyEricsson	W580i
SonyEricsson	W580im
SonyEricsson	W595
SonyEricsson	W600i
SonyEricsson	W610
SonyEricsson	W610i
SonyEricsson	W61S
SonyEricsson	W62S
SonyEricsson	W660i
SonyEricsson	W660iv
SonyEricsson	W710
SonyEricsson	W710c
SonyEricsson	W710i
SonyEricsson	W760a
SonyEricsson	W760i
SonyEricsson	W810
SonyEricsson	W810a
SonyEricsson	W810c
SonyEricsson	W810i
SonyEricsson	W830i
SonyEricsson	W850
SonyEricsson	W850i
SonyEricsson	W850iv
SonyEricsson	W880
SonyEricsson	W880i
SonyEricsson	W880iv
SonyEricsson	W888
SonyEricsson	W890i
SonyEricsson	W890iv
SonyEricsson	W900i
SonyEricsson	W902
SonyEricsson	W908c
SonyEricsson	W910i
SonyEricsson	Z750a
SonyEricsson	Z750i
SonyEricsson	Z800
SonyEricsson	Z800c
SonyEricsson	Z800i
Toshiba	A5511T
Toshiba	A5516T
Toshiba	A5517T
Toshiba	A5523T
Toshiba	A5529T
Toshiba	DRAPE
Toshiba	neon
Toshiba	Sportio
Toshiba	W21T
Toshiba	W31T
Toshiba	W32T

Toshiba	W41T
Toshiba	W43T
Toshiba	W44T/T II/T III
Toshiba	W45T
Toshiba	W47T
Toshiba	W51T
Toshiba	W52T
Toshiba	W53T
Toshiba	W54T
Toshiba	W55T
Toshiba	W56T
Toshiba	W61T
Toshiba	W62T
Vertu	AscentTi